

# Installation Instructions for the Honeywell Zephyr<sup>™</sup> Digital Airflow Sensors HAF Series–High Accuracy ±50 SCCM to ±750 SCCM

50045178 Issue E

### **GENERAL INFORMATION**

### CAUTION

IMPROPER USE

Do not use to sense liquid flow.

Failure to comply with these instructions may result in product damage.

### CAUTION IMPROPER CLEANING

- Avoid cleaning the sensor; however, if it must be cleaned use isopropyl alcohol and dry the device thoroughly before use. Cap the ports or connect housing to the ports before cleaning the sensor with alcohol. Using alcohol may remove the text on the sensor label; however, the label ID is hard coded inside the sensor.
- Do not use III Tri-chloroethane, methylene chloride, methyl pyrrolidone, or any oxidizing type acid such as formic acid.
- Do not use ultrasonic cleaning.

### Failure to comply with these instructions may result in product damage.

### CAUTION

### LARGE PARTICULATE DAMAGE

Use a 5-micron filter upstream of the sensor to keep media flow through the sensor free of condensing moisture and particulates. Large, high-velocity particles or conductive particles may damage the sensing element.

Failure to comply with these instructions may result in product damage.

#### Table 1. Absolute Maximum Ratings

Characteristic	Parameter		
Supply voltage	-0.3 Vdc to 6.0 Vdc		
Voltage on I/O output pin	-0.3 Vdc to Vsupply		
Storage temperature range	-40 °C to 125 °C [-40 °F to 257 °F]		
Maximum flow change	5.0 SLPM/s		
Maximum common mode pressure	25 psi at 25 °C [77 °F]		
Maximum flow	10 SLPM		

### NOTICE

Absolute maximum ratings are the extreme limits that the device will withstand without damage to the device. However, the electrical and mechanical characteristics are not guaranteed as the maximum limits (above recommended operating conditions) are approached, nor will the device necessary operate at absolute maximum ratings.

### **Table 2. Operating Specifications**

Characteristic	Parameter	Notes
Supply voltage: 3.3 Vdc 5.0 Vdc	3.3 Vdc ±10% 5.0 Vdc ±10%	_
Power: 3.3 Vdc 5.0 Vdc	40 mW max. 65 mW max.	1
Compensated temperature range	0 °C to 50 °C [32 °F to 122 °F]	2
Operating temperature range	-20 °C to 70 °C [-4 °F to 158 °F]	_
Warm-up time	30 ms	3
Calibration media	gaseous nitrogen	4
Bus standards	I²C fast mode (up to 400 kHz)	5
Reverse polarity protection	no	_

#### Notes:

- 1. Maximum power: Is measured under the conditions of the highest supply voltage, Vsupply + 10%, 70 °C, full scale flow and with the minimum load specified for that supply voltage.
- 2. Custom and extended compensated temperature ranges are possible. Contact Honeywell for details.
- Warm-up time: The time to the first valid flow measurement after power is applied.
- Default calibration media is dry nitrogen gas. Please contact Honeywell for other calibration options.
- 5. Refer to the Technical Note "I<sup>2</sup>C Communications with Honeywell Digital Airflow Sensors" for I<sup>2</sup>C protocol information.

#### Table 3. Environmental Characteristics

Characteristic	Parameter		
Humidity	0% to 95% RH, non-condensing		
Shock	100 g, 11 ms		
Vibration	15 g at 20 Hz to 2000 Hz		
ESD	Class 3B per MIL-STD 883G		


#### Table 4. Wetted Materials

Characteristic	Parameter	
Covers	high temperature polymer	
Substrate	PCB	
Adhesives	ероху	
Electronic components	silicon, gold	
Compliance	RoHS, WEEE	

#### Table 5. Recommended Mounting and Implementation

Characteristic	Parameter	
Mounting screw: size torque	5-40 0.68 N m [6 in lb]	
Silicone tubing for long port style	70 durometer; 0.125 inch inside diameter, 0.250 inch outside diameter	
O-ring: short port style long port style	AS568A, Size 7, Silicone, Shore A 70 AS568A, Size 10, Silicone, Shore A 70	
Filter	5-micron filter upstream of sensor	

Issue E 50045178

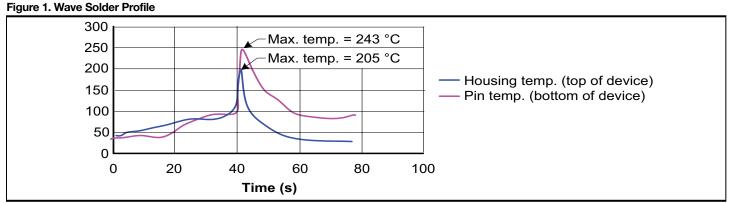


### **Digital Interface**

For additional details on the use of Zephyr with digital output see the Technical Note "I<sup>2</sup>C Communications with Honeywell Digital Airflow Sensors".

The sensor uses the I<sup>2</sup>C standard for digital communication with a slave address specified in the Nomenclature and Order Guide in Figure 2. Following sensor power-up, each of the first two read sequences shown in Figure 9 will respond with 2 bytes of the unique 4-byte Serial Number. The first read after power-up will respond with the two most significant bytes of the Serial Number, while the second read will respond with the two least significant bytes of the Serial Number. For reliable performance, allow sensor to be powered for the sensor start-up time before performing the first read, then allow a 10 ms command response time before performing the second read.

#### Figure 2. Sensor I<sup>2</sup>C Read and Write Sequences

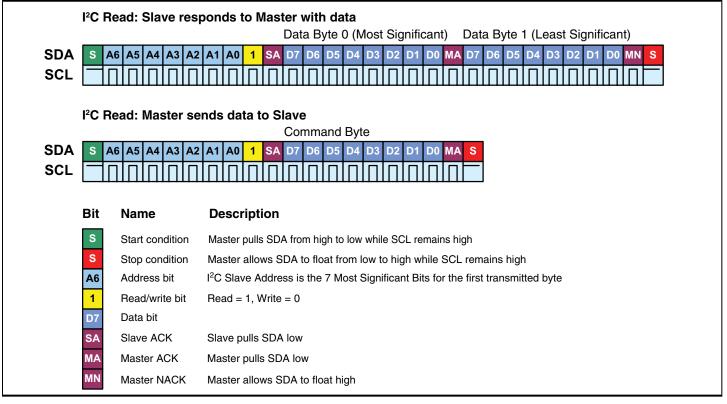


After the power-up read sequence described above, the sensor will respond to each I<sup>2</sup>C read request with a 16-bit (2 byte) digital flow reading. Read requests taken faster than the Response Time (1 ms) are not guaranteed to return fresh data. The first two bits of each flow reading will be '00'.

The maximum sink current on SCL or SDA is 2 mA. Therefore, if the pull-up resistors are biased by  $V_{DD}$ , and if  $V_{DD}$  reaches the maximum supply voltage of 6 V, then the pull-up resistors for SCL and SDA must be greater than 3.0 k $\Omega$  to limit the sink current to 2 mA. The typical value for SCL and SDA pull-up resistors is 4.7 k $\Omega$  (this value depends on the bus capacitance and the bus speed).


Issue E 50045178

Figure 3. Mounting Dimensions (For reference only: mm [in].)

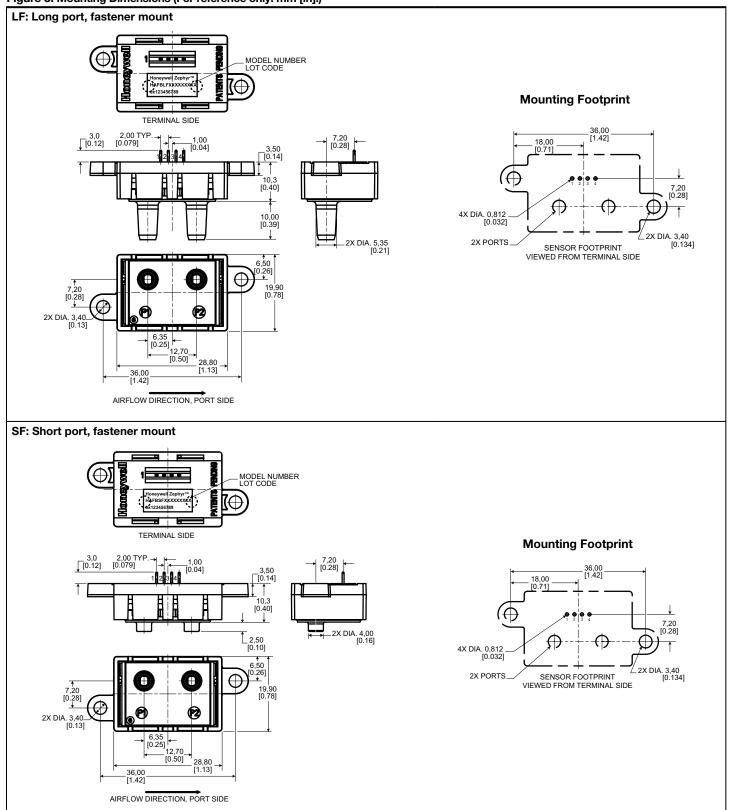

Issue E 50045178


Figure 3. Mounting Dimensions (continued)

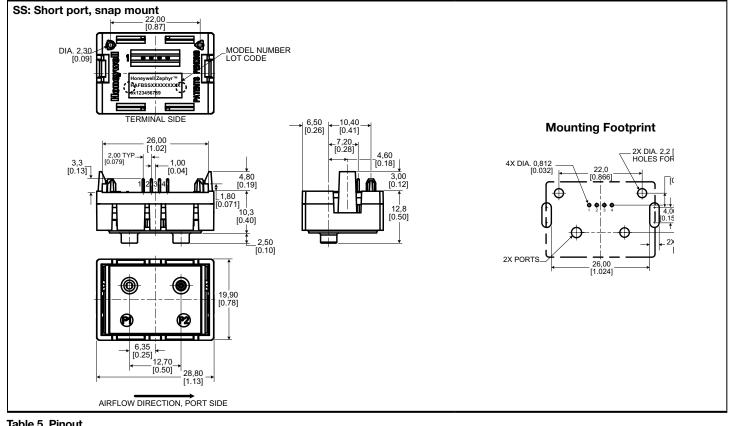

#### Table 5. Pinout

Pin 1	Pin 2	Pin 3	Pin 4
SCL	Vsupply	ground	SDA

#### Figure 4. Nomenclature and Order Guide

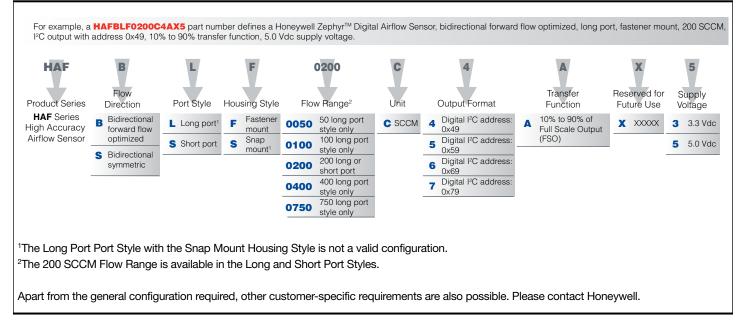

### Issue E 50045178

# WARNING PERSONAL INJURY

DO NOT USE these products as safety or emergency stop devices or in any other application where failure of the product could result in personal injury.

Failure to comply with these instructions could result in death or serious injury.

### WARRANTY/REMEDY

Honeywell warrants goods of its manufacture as being free of defective materials and faulty workmanship. Honeywell's standard product warranty applies unless agreed to otherwise by Honeywell in writing; please refer to your order acknowledgement or consult your local sales office for specific warranty details. If warranted goods are returned to Honeywell during the period of coverage, Honeywell will repair or replace, at its option, without charge those items it finds defective. **The foregoing is buyer's sole remedy and is in lieu of all other warranties, expressed or implied, including those of merchantability and fitness for a particular purpose. In no event shall Honeywell be liable for consequential, special, or indirect damages.** 

While we provide application assistance personally, through our literature and the Honeywell web site, it is up to the customer to determine the suitability of the product in the application.

Specifications may change without notice. The information we supply is believed to be accurate and reliable as of this printing. However, we assume no responsibility for its use.

Honeywell serves its customers through a worldwide network of sales offices, representatives and distributors. For application assistance, current specifications, pricing or name of the nearest Authorized Distributor, contact your local sales office or:

E-mail: info.sc@honeywell.com Internet: sensing.honeywell.com Phone and Fax: USA/Canada +1-800-537-6945 International +1-815-235-6847; +1-815-235-6545 Fax

Sensing and Control Honeywell 1985 Douglas Drive North Golden Valley, MN 55422 honeywell.com

# Honeywell

50045178-E-EN IL50 June 2015 © 2015 Honeywell International Inc. All rights reserved.